

Wireless RF Multi-Function Wall Station MODEL # 3977

WARNING DURING PROGRAMMING THE GARAGE DOOR MAY OPERATE. KEEP PEOPLE AND OBJECTS CLEAR OF THE MOVING DOOR TO PREVENT DOOR DAMAGE OR POSSIBLE PERSONAL INJURY.

Wall Station Installation

The wall station can be mounted to a NEMA standard electrical device box or directly to any wall surface. No wiring is required. Select appropriate place to mount wall station. Locate it at least five feet up from the floor. If possible, install on wood framing. If fastening into drywall or concrete, use anchors provided. Using a 3/32" drill bit and the drilling template located on page 2, drill 3/16" holes if using anchors. Install lower screw leaving 7/16" of the screw exposed. Slide wall station keyhole slot onto the lower screw. Wall station should slide onto screw, providing a snug fit. If necessary, remove wall station and loosen or tighten lower screw. Once wall station is fitted snugly on lower screw, install upper screw. Do not over tighten.

CAUTION: OVER TIGHTENING THE SCREWS COULD DEFORM PLASTIC CASE. IF A WALL STATION BUTTON IS STICKING OR NOT WORKING, TRY ADJUSTING MOUNTING SCREW.

If mounting to a NEMA electrical device box use machine thread screws provided in place of the wood screws. No drilling is required. If high voltage wiring is contained in the box a standard NEMA solid faceplate must be installed between the box and the wall station.

Battery Installation

Remove the battery cover completely (right-hand side of wall station) by disengaging the battery cover's lower clip. Install two AAA batteries into the wall station observing the polarity, (+) and (-), of both batteries. After a few seconds, the red LED will begin to blink once every three seconds. Re-install the battery cover by first inserting its top into the wall station then inserting and securing its bottom. Apply entrapment label in convenient location next to the wall station.

WARNING TO AVOID POSSIBLE FIRE OR BURN HAZARD, DO NOT RECHARGE, DISASSEMBLE, HEAT, OR INCINERATE BATTERIES.

WARNING KEEP BATTERIES OUT OF THE REACH. IF SWALLOWED, CONTACT PHYSICIAN IMMEDIATELY.

DISPOSE OF USED BATTERIES PROPERLY.

Programming Wall Station

- 1) Pull the emergency disconnect handle to the manual door operated position (lower position). This is for safety reasons.
- 2) Press and release program button on DoorMaster™ light fixture, iDrive®, Torsion iDrive®, Prodrive®, Quantum® and Classic drive® opener; DoorMaster™ light fixture, Prodrive®, Quantum® and Classic drive® status LED will light or iDrive® opener will beep once.
- 3) Press and hold wall station light button for 1-2 seconds; status LED and convenience light will blink three times or opener will beep once. If programming to a DoorMaster™ opener, press the light button a second time for 1-2 seconds.
- 4) Return the emergency disconnect handle to motor operated position.
- 5) Press and hold wall station up/down button for 1-2 seconds; Door should operate. Wall station is now programmed to the opener.

NOTE: iDrive® model only - The first wall station command after programming will only move the door through a six-inch up/down cycle. Normal door operation will occur on all subsequent commands.

Rapid DoorMaster™ light fixture LED blinking not preceded by the brief on period or no beep response from iDrive® indicates a programming failure. Repeat steps 1-5.


NOTE: The iDrive® and DoorMaster™ opener can be activated by up to six remote control devices (including wall station and keyless entry controls). If a seventh control is programmed, the first of the programmed controls will be overridden and will no longer activate the operator. To clear the programming of all remote control devices, press and hold the DoorMaster™ light fixture program button or iDrive® opener program button for approximately ten seconds. When the DoorMaster™ status LED goes out or iDrive® opener beeps three times, then all controls are erased.

NOTE: The Prodrive®, Quantum® and Classicdrive® opener can be activated by up to 8 remote transmitters, 2 wall stations and 2 keyless entries. If a 9th remote is programmed the first remote programmed will be lost from memory. The same is true if a third wall station or a third keyless entry is programmed, the first will no longer be in memory and will not operate the opener. To clear the programming of all remote control devices, press and hold the Prodrive®, Quantum® or Classic drive® opener program button for approximately ten seconds. When the Prodrive®, Quantum®, Classic drive® status LED goes out, then all controls are erased.

NOTE: Refer to opener's Installation Instructions and Owner's Manual for additional operating information. A copy of the Installation Instructions and Owner's Manual for your opener can be obtained by visiting www.wayne-dalton.com or calling 1-888-827-3667.



program button
iDrive®
for Torsion Springs

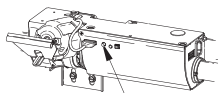


program button
iDrive®
for TorqueMaster®



program button
LED
DoorMaster™



program button
Prodrive®
Quantum®
Classicdrive®

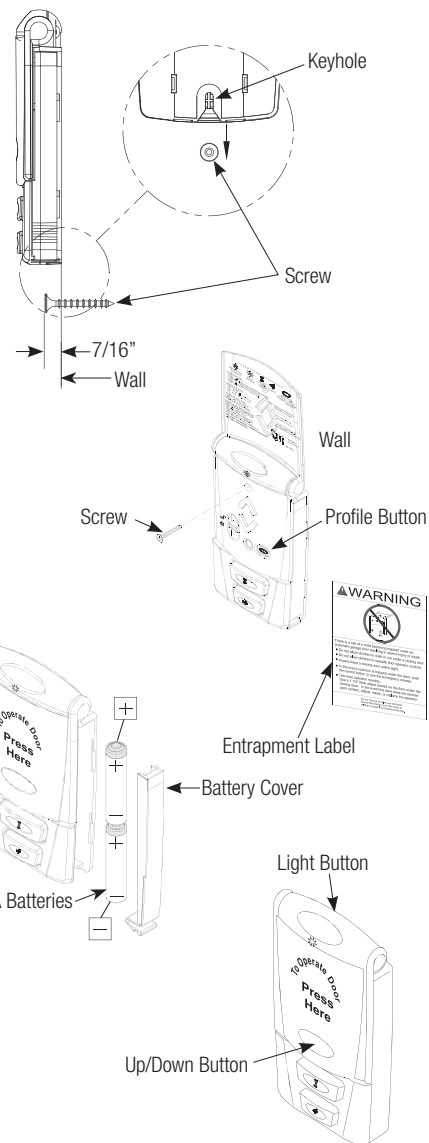

WARNING NEVER LET CHILDREN OPERATE OR PLAY WITH DOOR CONTROLS. KEEP REMOTE CONTROLS AWAY FROM CHILDREN. FATAL INJURY COULD RESULT SHOULD A CHILD BECOME TRAPPED BETWEEN THE DOOR AND THE FLOOR.

WARNING ALWAYS KEEP MOVING DOOR IN SIGHT AND KEEP PEOPLE AND OBJECTS AWAY UNTIL DOOR IS COMPLETELY CLOSED. TO PREVENT SEVERE OR FATAL INJURY, AVOID STANDING IN THE OPEN DOORWAY OR WALKING THROUGH THE DOORWAY WHILE DOOR IS MOVING.

Limited Warranty
Wireless RF Multi-Function Wall Station
Model: #3977

Subject to the terms and conditions contained in this Limited Warranty, Wayne-Dalton Corp. ("Manufacturer") warrants the Wireless RF Multi-Function Wall Station, including electronic components (Batteries are not warranted), which is described at the top of this page, for a period of ONE (1) YEAR from the date of installation against:

- (i) Any defects in material or workmanship.

This Limited Warranty is extended only to the person who purchased the product and continues to own the premises (where the product is installed) as his/her primary residence ("Buyer"). This Limited Warranty does not apply to residences other than primary, or to commercial or industrial installations, or to installations on rental property (even when used by a tenant as a residence). This Limited Warranty is not transferable to any other person (even when the premises is sold), nor does it extend benefits to any other person. As a result this Limited Warranty does NOT apply to any person who purchases the product from someone other than an authorized Wayne-Dalton dealer or distributor.

The Manufacturer will not be responsible for any damage attributable to improper storage, improper installation, or any alteration of the product or its components, abuse, fire, Acts of God, failure to properly maintain the product, or attempt to use the product, its components or related products for other than its intended purpose and its customary usage. This Limited Warranty does not cover ordinary wear.

THIS LIMITED WARRANTY COVERS A CONSUMER PRODUCT AS DEFINED BY THE MAGNUSON-MOSS ACT. NO WARRANTIES, EXPRESS OR IMPLIED (INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) WILL EXTEND BEYOND THE TIME PERIOD SET FORTH IN UNDERSCORED BOLD FACE TYPE IN THIS LIMITED WARRANTY, ABOVE.

- Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Any claim under this Limited Warranty must be made in writing, within the applicable warranty period, to the dealer from which the product was purchased. Unless the dealer is no longer in business, a written claim to the Manufacturer will be the same as if no claim had been made at all.

At the Manufacturer's option, a service representative may inspect the product on site, or Buyer may be required to return the product to the Manufacturer at Buyer's expense. Buyer agrees to cooperate with any representative of the Manufacturer and to give such representative full access to the product with the claimed defect and full access to the location of its installation.

If the Manufacturer determines that the claim is valid under the terms of this Limited Warranty, the Manufacturer will repair or replace the defective product. The decision about the manner in which the defect will be remedied will be at the discretion of the Manufacturer, subject to applicable law. **THE REMEDY WILL COVER ONLY MATERIAL. THIS LIMITED WARRANTY DOES NOT COVER OTHER CHARGES, SUCH AS FIELD SERVICE LABOR FOR REMOVAL, INSTALLATION, SHIPPING, ETC.**

Any repairs or replacements arranged by Manufacturer will be covered by (and subject to) the terms, conditions, limitations and exceptions of this Limited Warranty; provided, however, that the installation date for the repaired or replaced product will be deemed to be the date the original product was installed, and this Limited Warranty will expire at the same time as if there had been no defect. If a claim under this Limited Warranty is resolved in a manner other than described in the immediately preceding paragraph, then neither this Limited Warranty nor any other warranty from the Manufacturer will cover the repaired or replaced portion of the product.

THE REMEDIES FOR THE BUYER DESCRIBED IN THIS LIMITED WARRANTY ARE EXCLUSIVE and take the place of any other remedy. The liability of the Manufacturer, whether in contract or tort, under warranty, product liability, or otherwise, will not go beyond the Manufacturer's obligation to repair or replace, at its option, as described above. THE MANUFACTURER WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, including (but not limited to) damage or loss of other property or equipment, personal injury, loss of profits or revenues, business or service interruptions, cost of capital, cost of purchase or replacement of other goods, or claims of third parties for any of the foregoing.

- Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

No employee, distributor, dealer, representative, or other person has the authority to modify any term or condition contained in this Limited Warranty or to grant any other warranty on behalf of or binding on the Manufacturer, and anyone's attempt to do so will be null and void.


Buyer should be prepared to verify the date of installation to the satisfaction of the Manufacturer.

The rights and obligations of the Manufacturer and Buyer under this Limited Warranty will be governed by the laws of the State of Ohio, USA, to the extent permitted by law.

- This Limited Warranty gives you specific legal rights and you may also have other rights, which may vary from State to State.

Questions??
For quick answers and helpful advice, call
Wayne-Dalton Customer Service
(888) 827-3667

Covered by one or more of the following Patents 7,375,484; 7,315,143; 7,038,409; 6,326,754; D505,393 and D413,867. Other US and Foreign Patents pending.

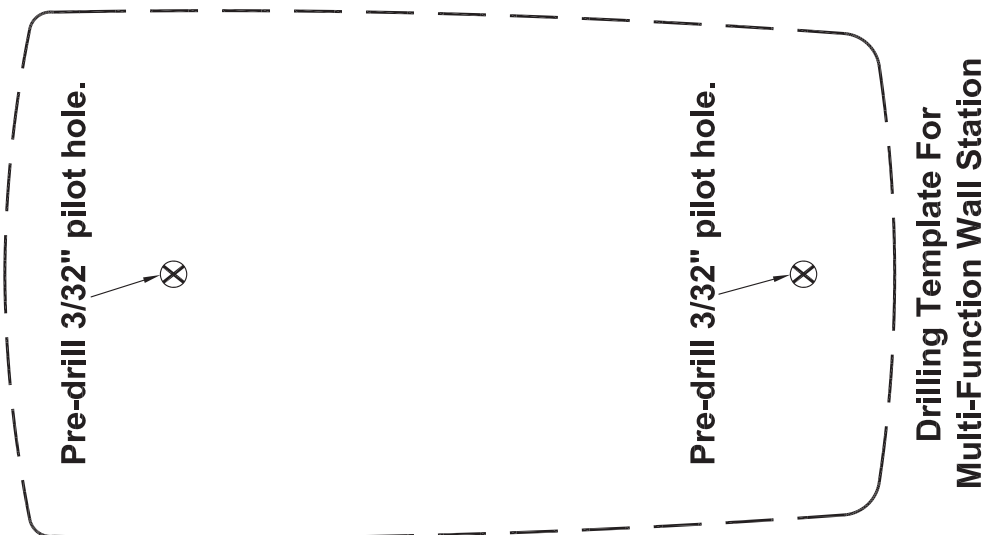

Wireless RF Multi-function Wall station

Drilling not required if mounting to a NEMA electrical device box. Use machine thread screws provided.